


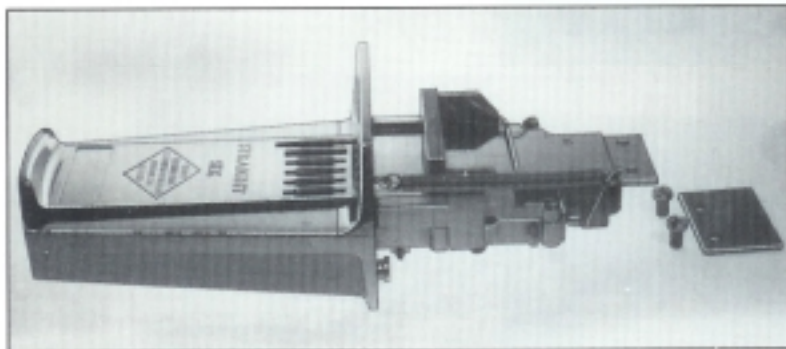


SLIDE & PRICE CHANGE INSTRUCTIONS FOR THE STRAIGHT SIX




SLIDE CHANGE


- 1 Remove any actuating bracket attached to the end of the slide.

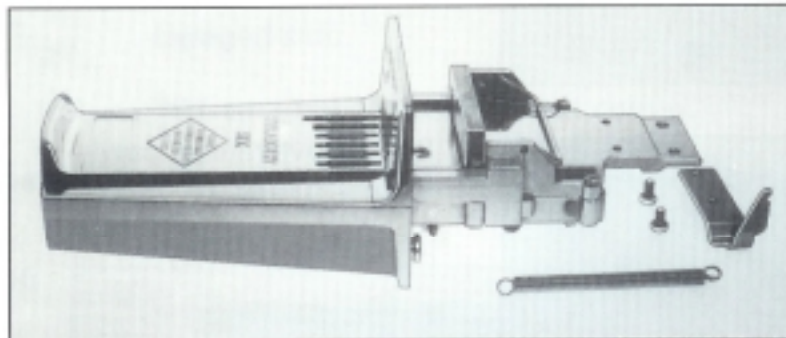

- 2 Remove slide back-stop and return spring.

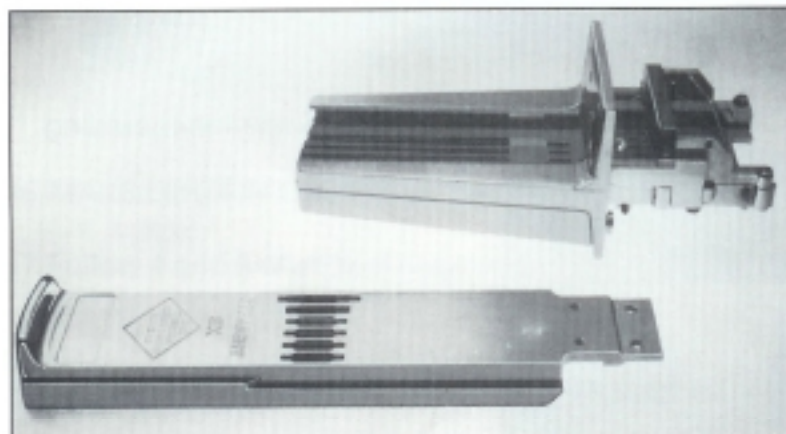

- 3 Pull out slide.

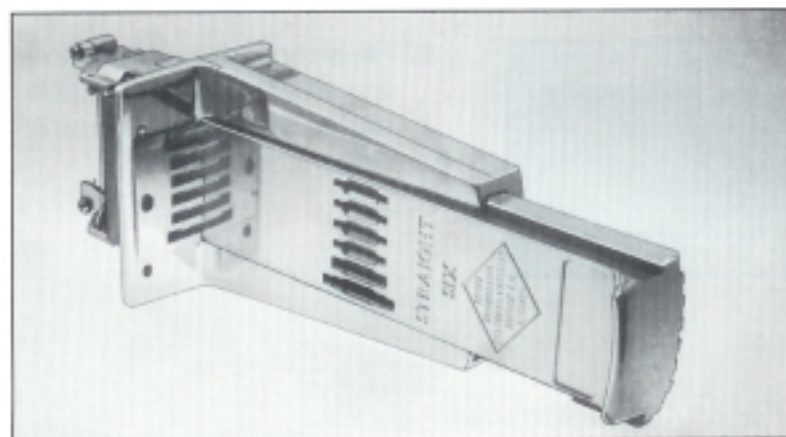


- 4 To enter new slide, turn mech onto its left-hand side and push slide in.


- 5 Replace slide stop and return spring. Remember to use LOCTITE on slide stop screws.

PRICE CHANGE


Carry out operations 1-3 of slide change then

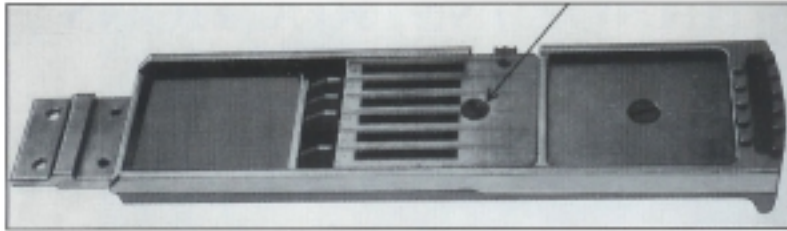


- 6 Undo stop plate screw.
Use a LARGE screwdriver.

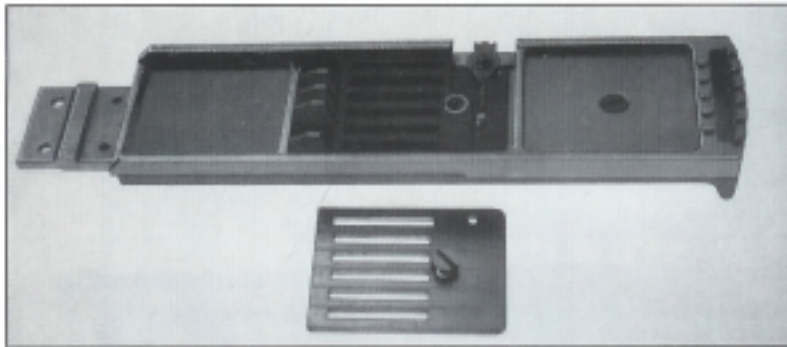


- 7 Take off stop plate.

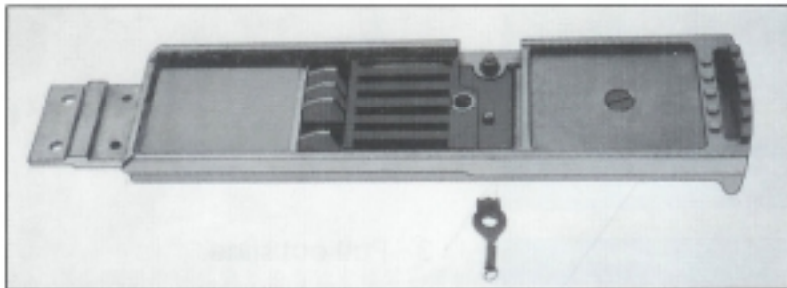

- 8 Remove ratchet pawl
and spring

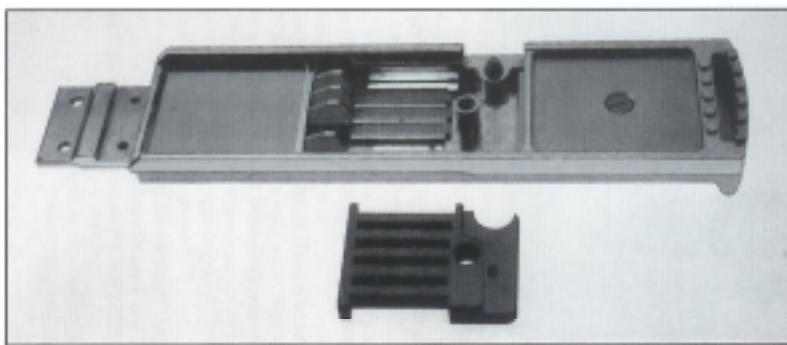

- 9 Remove nylon moulding.

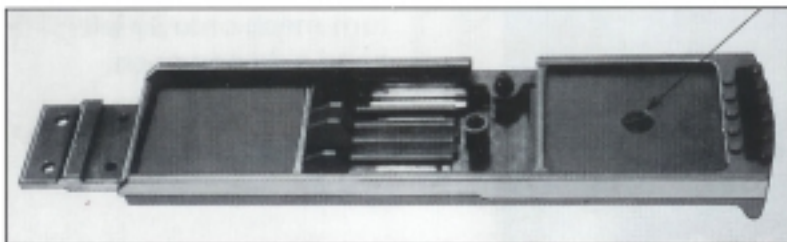

- 10 Re-arrange block out cams
to suit your new price, tak-
ing additional cams from
under cover plate.

- 11 Replace cover plate LOCTITE screw.
- 12 Replace moulding.
- 13 Replace ratchet spring and ratchet pawl.

NOTE: Ratchet pawl goes with swaged side up.



Swaged side




Plain side

take care not to strain ratchet spring.

- 14 Replace stop plate. LOCTITE SCREW.

15

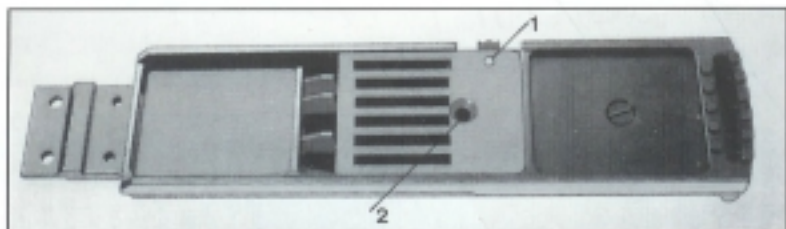

Make sure stop plate (1) locates the ratchet pivot, before replacing screw in countersunk hole (2).

- 16 MAKE CERTAIN LOCTITE is used to hold stop plate fixing screw vibration proof.
- 17 Follow 4 and 5 of slide change instructions on page 1.